

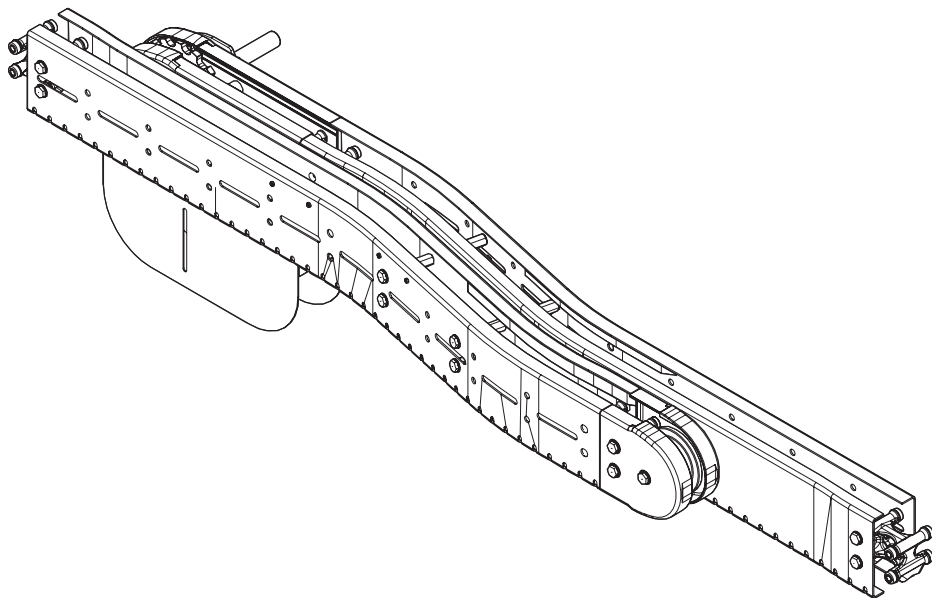
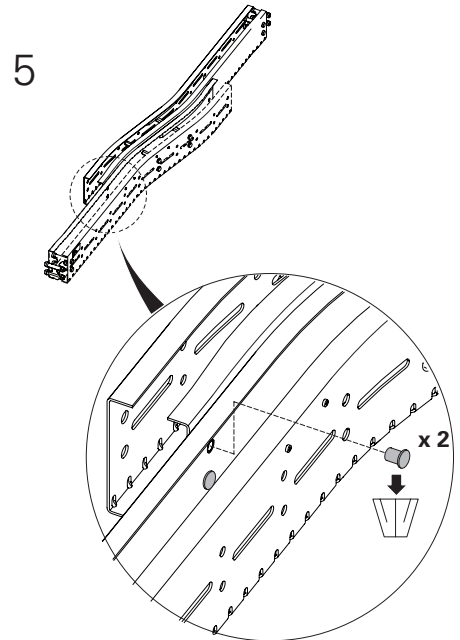
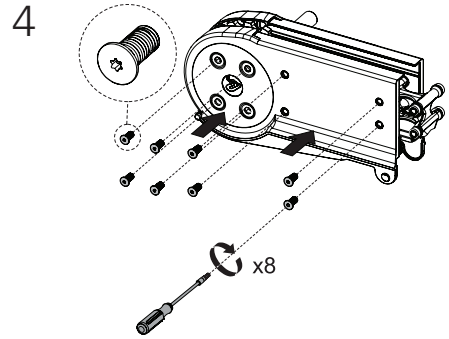
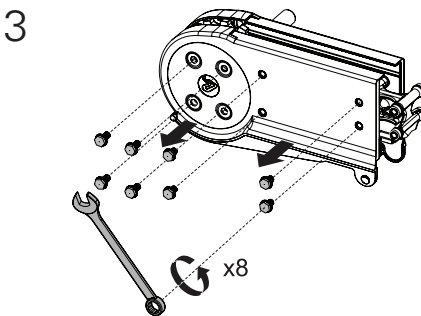





MOUNTING INSTRUCTION

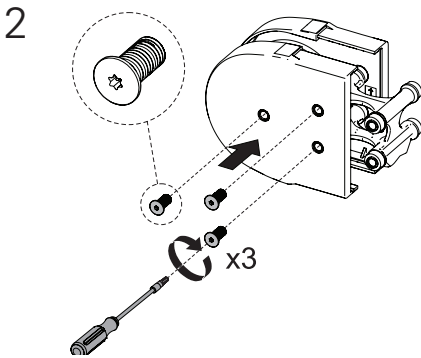


S-TRANSFER, X70X

XLCXX A70 DR
XLCXX A70 DL

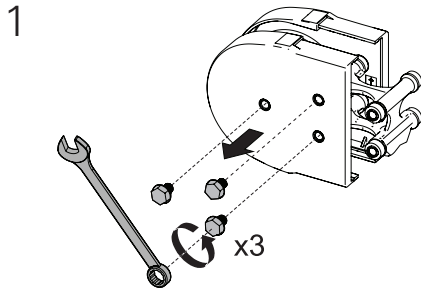


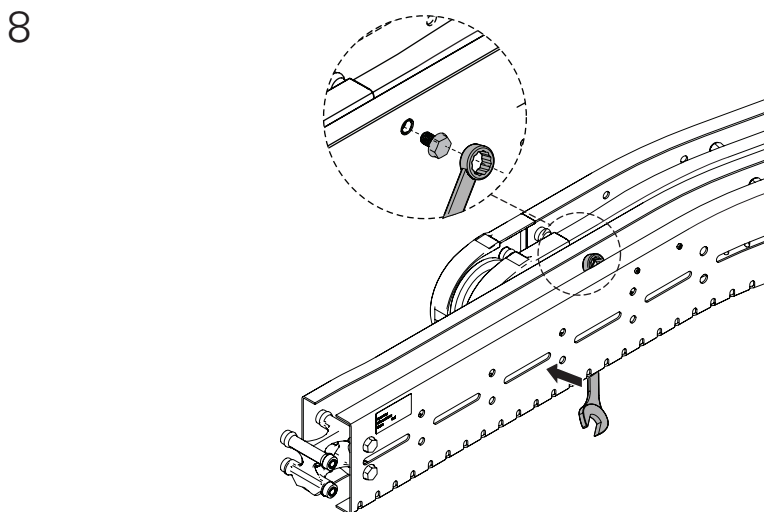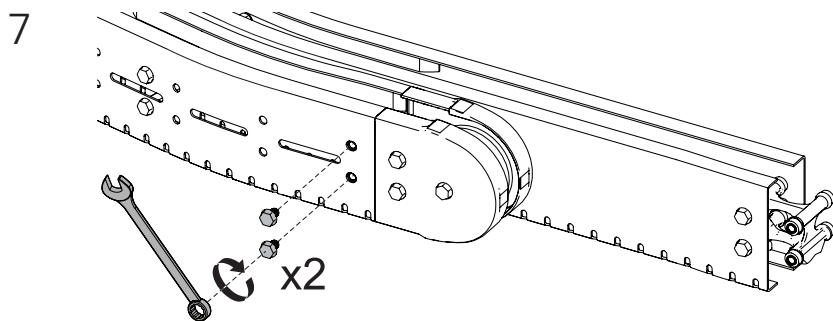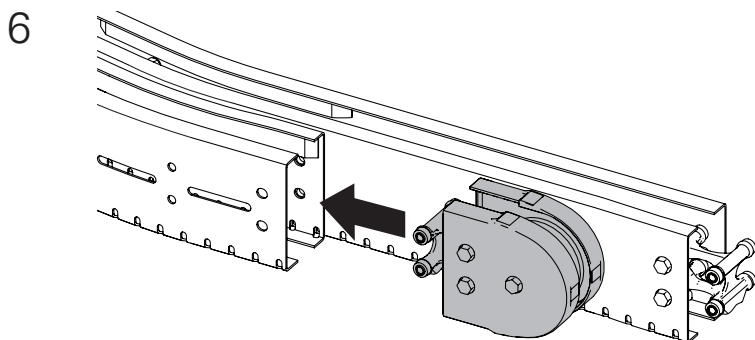


9

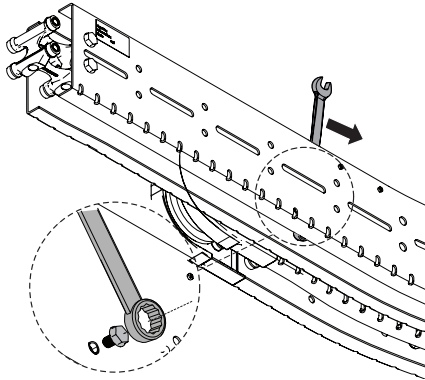


10

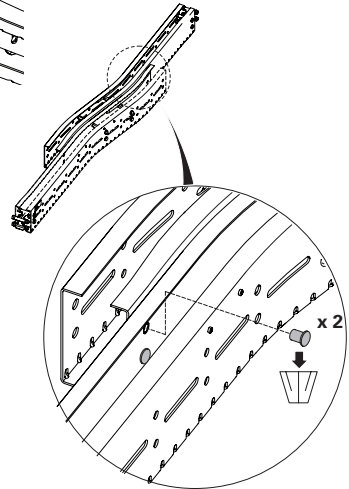


11

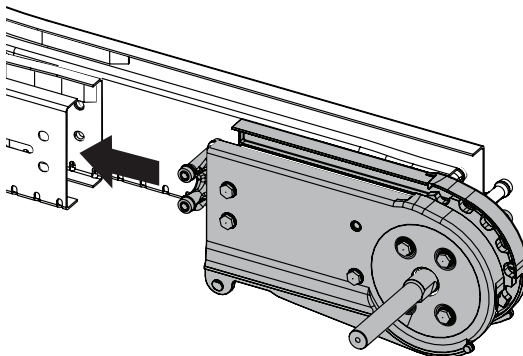


12

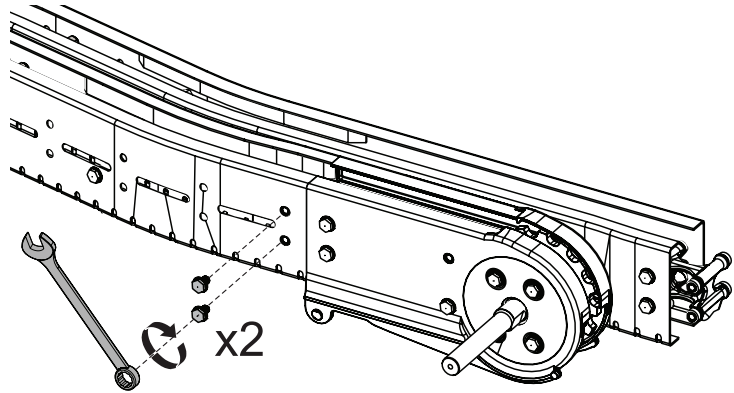


13

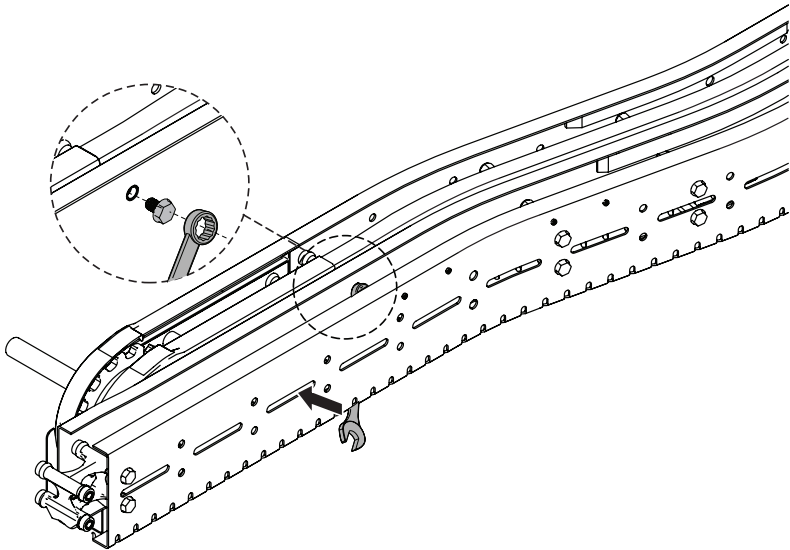


14

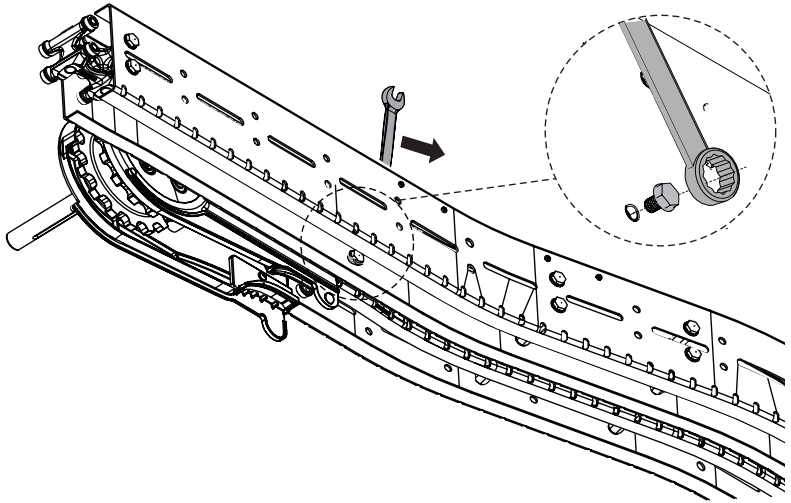





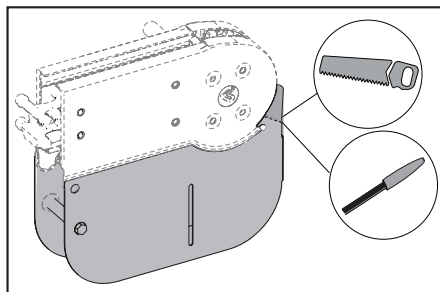


15

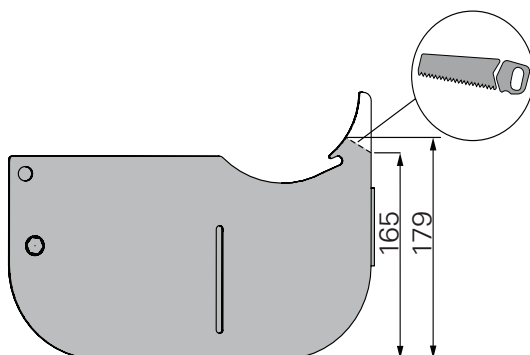


16

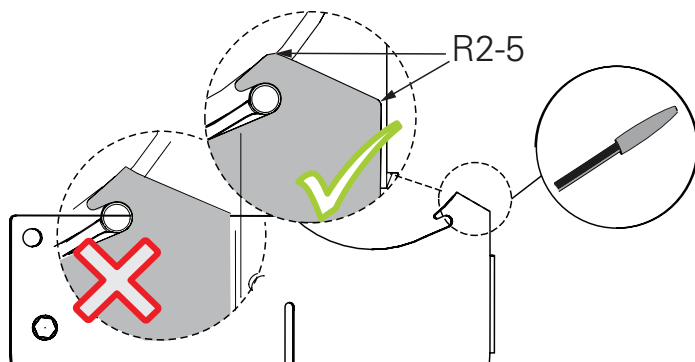

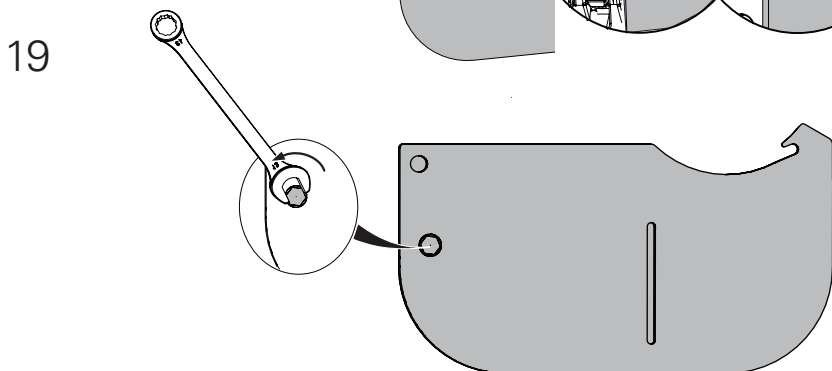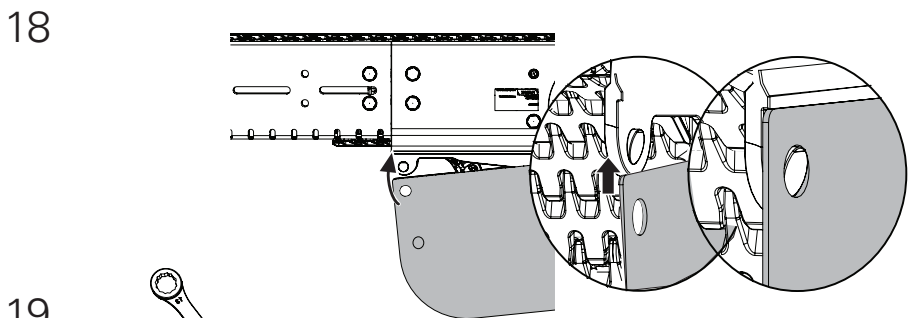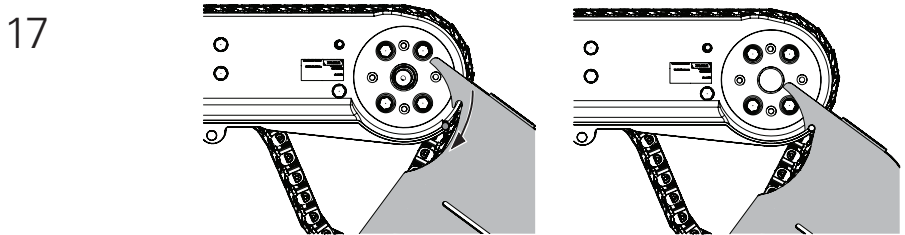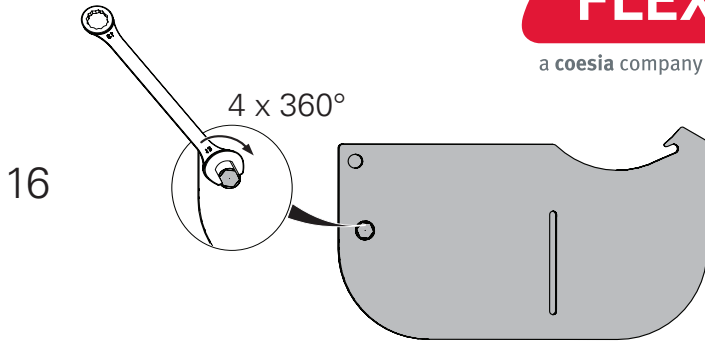

If you experience an uneven transfer between the beam sections, the following actions may be taken.

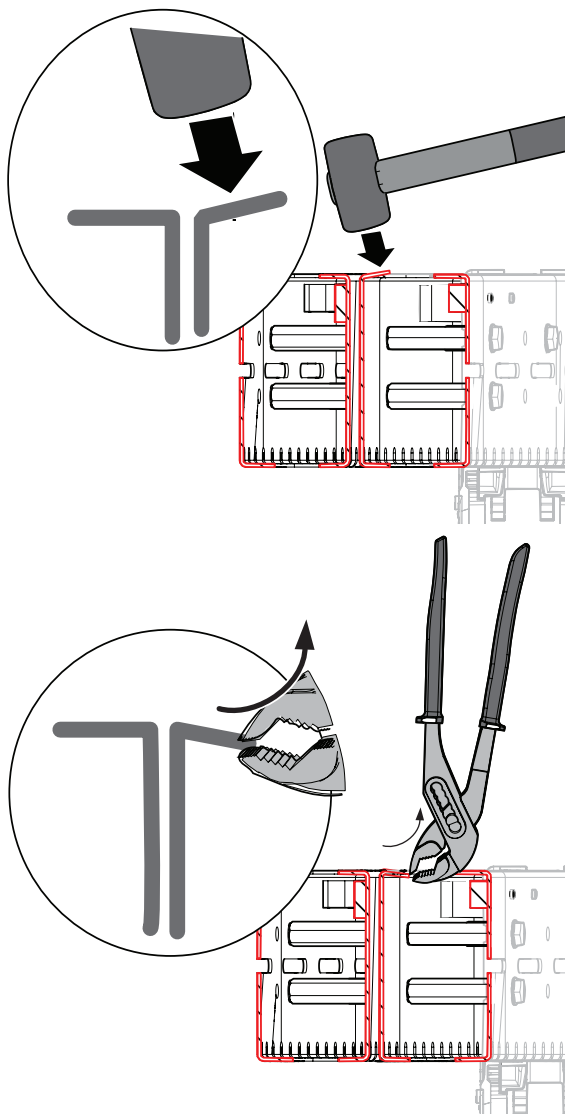

info@flexlink.com
flexlink.com

