


PRE-REQUISITES

Recommended tools

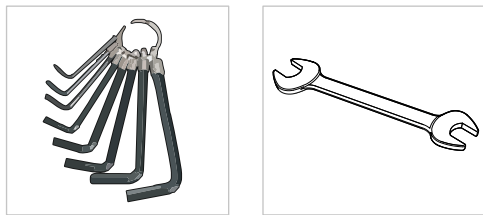

SAFETY

WARNING
The system must not be operated without safety equipment properly mounted.

WARNING
At installation, maintenance and service, make sure the motor is shut off.

WARNING
Pinch Point

CAUTION
Due to heavy weight - 2 person lift, or mechanical lift equipment.

PRODUCTS

XBUL 11

Support optional

XPBX 160 / Z-5988024



XBUL 11

WARNING
Pinch Point

Protection required, if unit can be activated without pallet

Production flow direction

X8
 $\approx 8-12 \text{ Nm}$

Unit must be supported

WARNING
Heavy Weight

XPBX 160 / Z-5988024

If area X not covered in application

Area X

WARNING
Pinch Point

Pallet stop

XPBX 160

Pallet pre-stop

| Basic value, Torque for dimension | | | |
|-----------------------------------|-------------------|----------------------|--------------------|
| M5 | M6 | M8 | M10 |
| 4 Nm / 35 lb. in. | 9 Nm / 80 lb. in. | 24,5 Nm / 217 lb.in. | 45 Nm / 398 lb.in. |

FlexLink Components AB
SE-41550 Göteborg
Sweden

We hereby declare that the following equipment is intended to be incorporated into a FlexLink conveyor system and thereby forming a machine. Operation is prohibited until it has been determined that the machine in which these products are incorporated, has been declared in conformity with the Machinery Directive 2006/42/EC, together with amendments which have entered into force as of the date of issue of this declaration, with particular reference to the essential health and safety requirements in connection with the design, construction and manufacture of the below specified equipment.

- Basic Locating Module, XBUL 11

ASSEMBLY INSTRUCTION

Basic Locating Module XBUL 11

FlexLink Components AB



Svante Anderholm
Chief Operating Officer

Flexlink Components AB



Anders Jonsson
Responsible Technical file

FlexLink Components AB

Telephone: +46-31-337 31 00
Fax: +46-31-337 22 33
www.flexlink.com

SE-415 50 Göteborg
Sweden

