


PRE-REQUISITES

Recommended tools

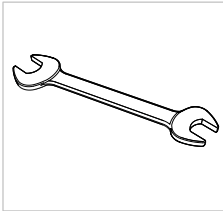

SAFETY



WARNING
The system must not be operated without safety equipment properly mounted.



WARNING
At installation, maintenance and service, make sure the motor is shut off.




WARNING
Pinch Point






CAUTION
Due to heavy weight - 2 person lift, or mechanical lift equipment.

COMPONENTS



0-unit

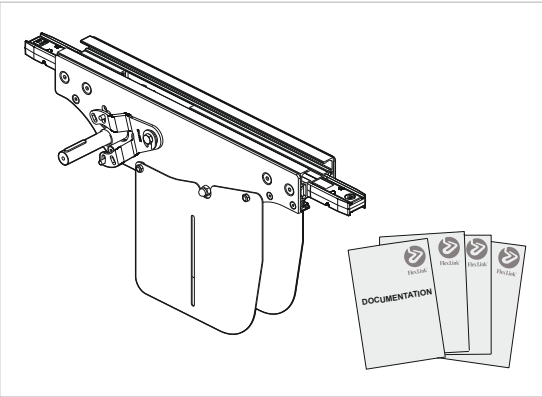

Drive Unit

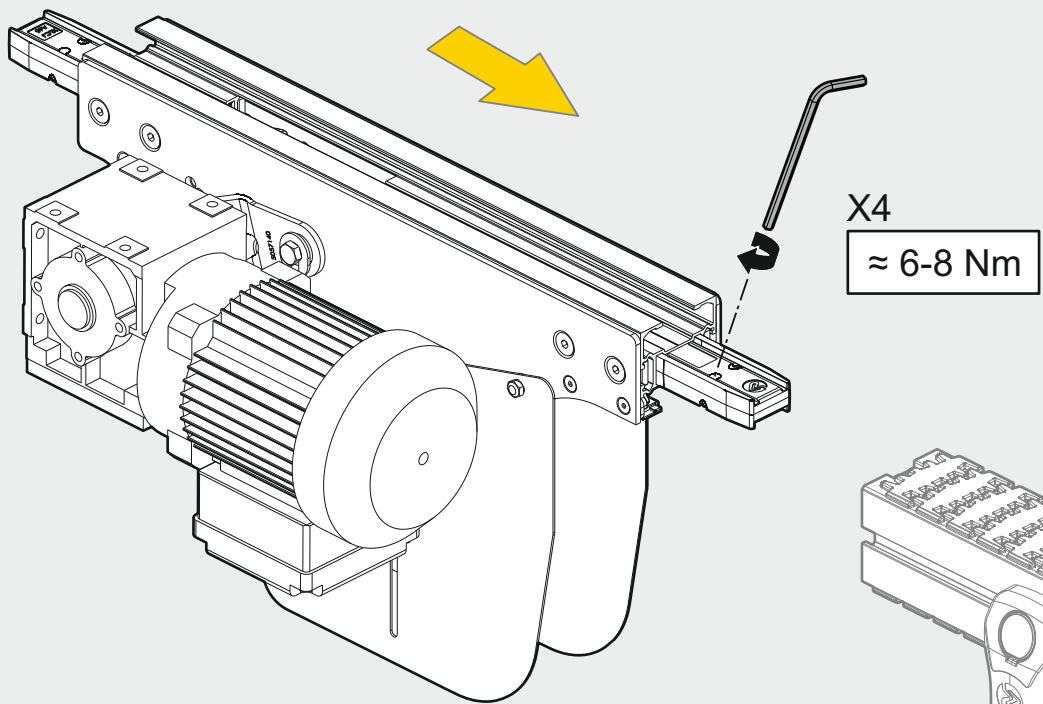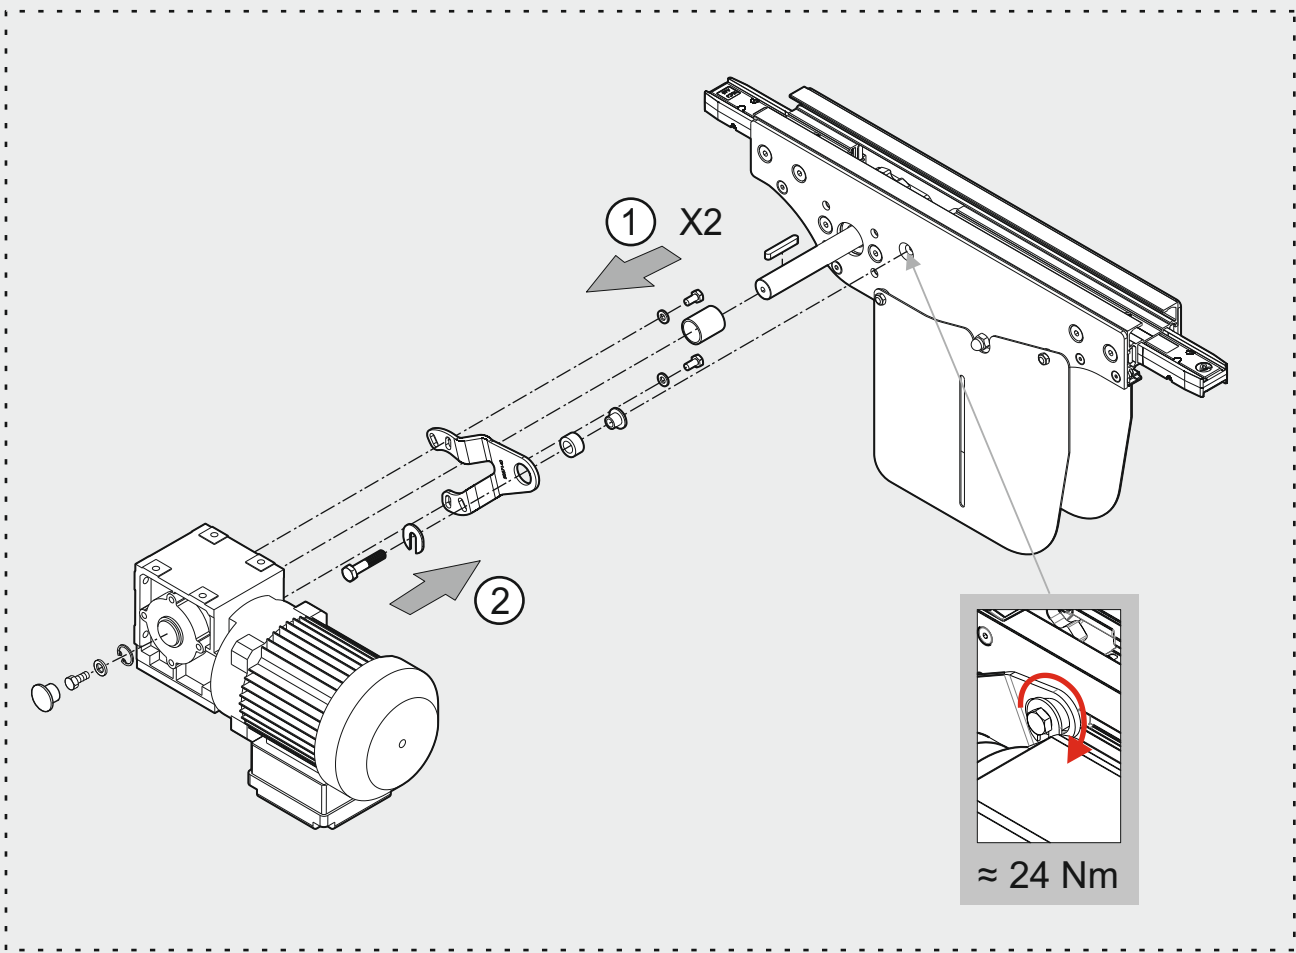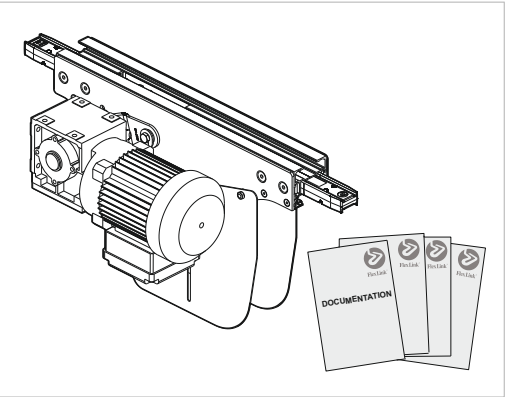

X4
≈ 6-8 Nm

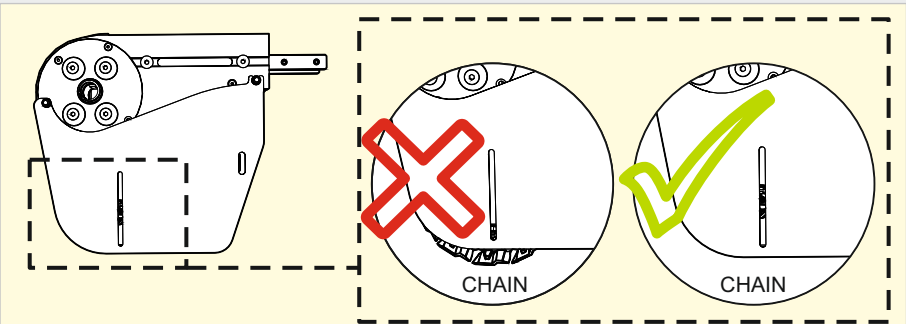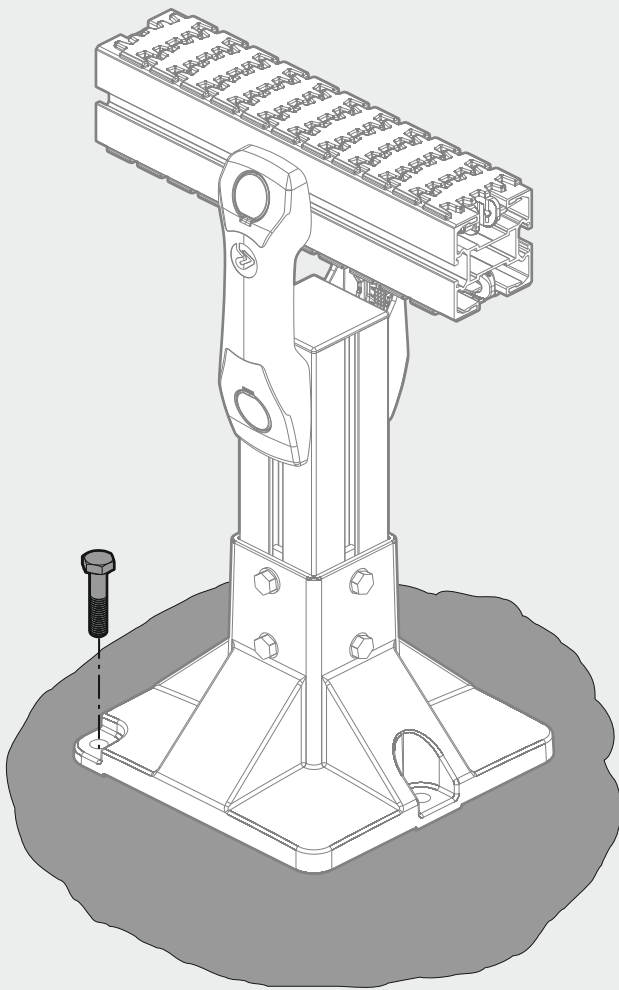

CAUTION
The conveyor chain must be maintained during system lifetime. If the conveyor chain is too long, it must be shortened.

Basic value, Torque for dimension			
M5	M6	M8	M10
4 Nm / 35 lb. in.	9 Nm / 80 lb. in.	24,5 Nm / 217 lb.in.	45 Nm / 398 lb.in.

FlexLink Components AB
SE-41550 Göteborg
Sweden

We hereby declare that the following equipment is intended to be incorporated into a FlexLink conveyor system and thereby forming a machine. Operation is prohibited until it has been determined that the machine in which these products are incorporated, has been declared in conformity with the Machinery Directive 2006/42/EC, together with amendments which have entered into force as of the date of issue of this declaration, with particular reference to the essential health and safety requirements in connection with the design, construction and manufacture of the below specified equipment.

- Intermediate Drive Unit XLER A65MNP, Direct Drive without Slip Clutch

ASSEMBLY INSTRUCTION

Intermediate Drive Unit, XLER A65MNP
Direct Drive without Slip Clutch

FlexLink Components AB



Svante Anderholm
Chief Operating Officer

FlexLink Components AB

Fredrik Sandinge
Responsible Technical file

FlexLink Components AB

Telephone: +46-31-337 31 00
Fax: +46-31-337 22 33
www.flexlink.com

SE-415 50 Göteborg
Sweden

