


Instruction Steel chain 5056849, X85



a coesia company


Mounting instruction for X85 system, for corresponding information concerning XM system, see instruction on Flexlink web site and Product catalogue, Steel chain XM. **6622461-02**

Dimensions

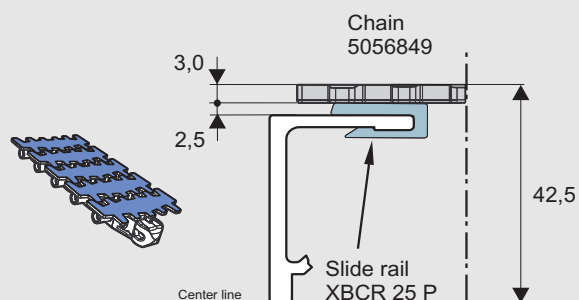

As an alternative, slide rail XBCR 25 PB can be used.

Rebuilding kit for end drive unit, 5058263

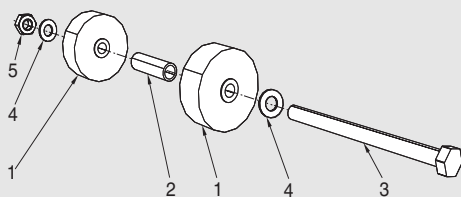


Rebuilding kit for end drive unit

5058263


Item	Qty	Id no	Name	Item no
1	2	5057414	Wheel 1153-0 HPI-50 NK/K	5057414
2	1	5111385	Distance piece	5111385
3	1	5111401	Screw	5111401
4	2	5046416	Washer	BRB 8,4x16x1,6
5	1	5046629	Nut	5046629

Procedure:

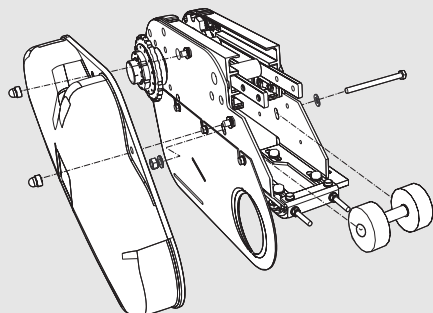

Use existing holes in the drive unit side plates and mount the material in the rebuilding kit according to the pictures above. After mounting, adjust position of the rollers

Rebuilding kit for end drive unit, direct drive, 5058269

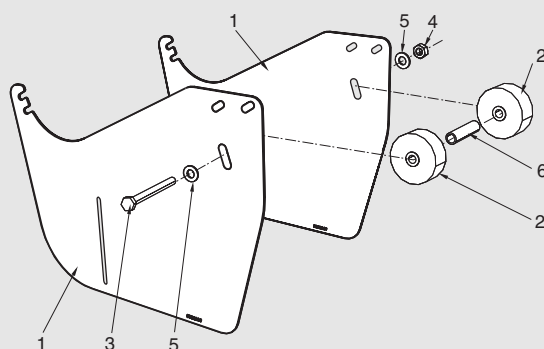

Rebuilding kit for end drive unit, direct drive

5058269

Item	Qty	Id no	Name	Item no
1	2	5058267	Slack protection	5058267
2	2	5057414	Wheel 1153-0 HPI-50 NK/K	5057414
3	1	5054359	Screw	M6S M8x100 H 8
4	1	5046629	Nut	5046629
5	2	5046416	Washer	BRB 8,4x16x1,6
6	1	5058266	Distance piece	5058266

Procedure:

